


PUMP BACK FUEL & WIRING DIAGRAM

FUEL GAUGE CHANGEOVER RELAY

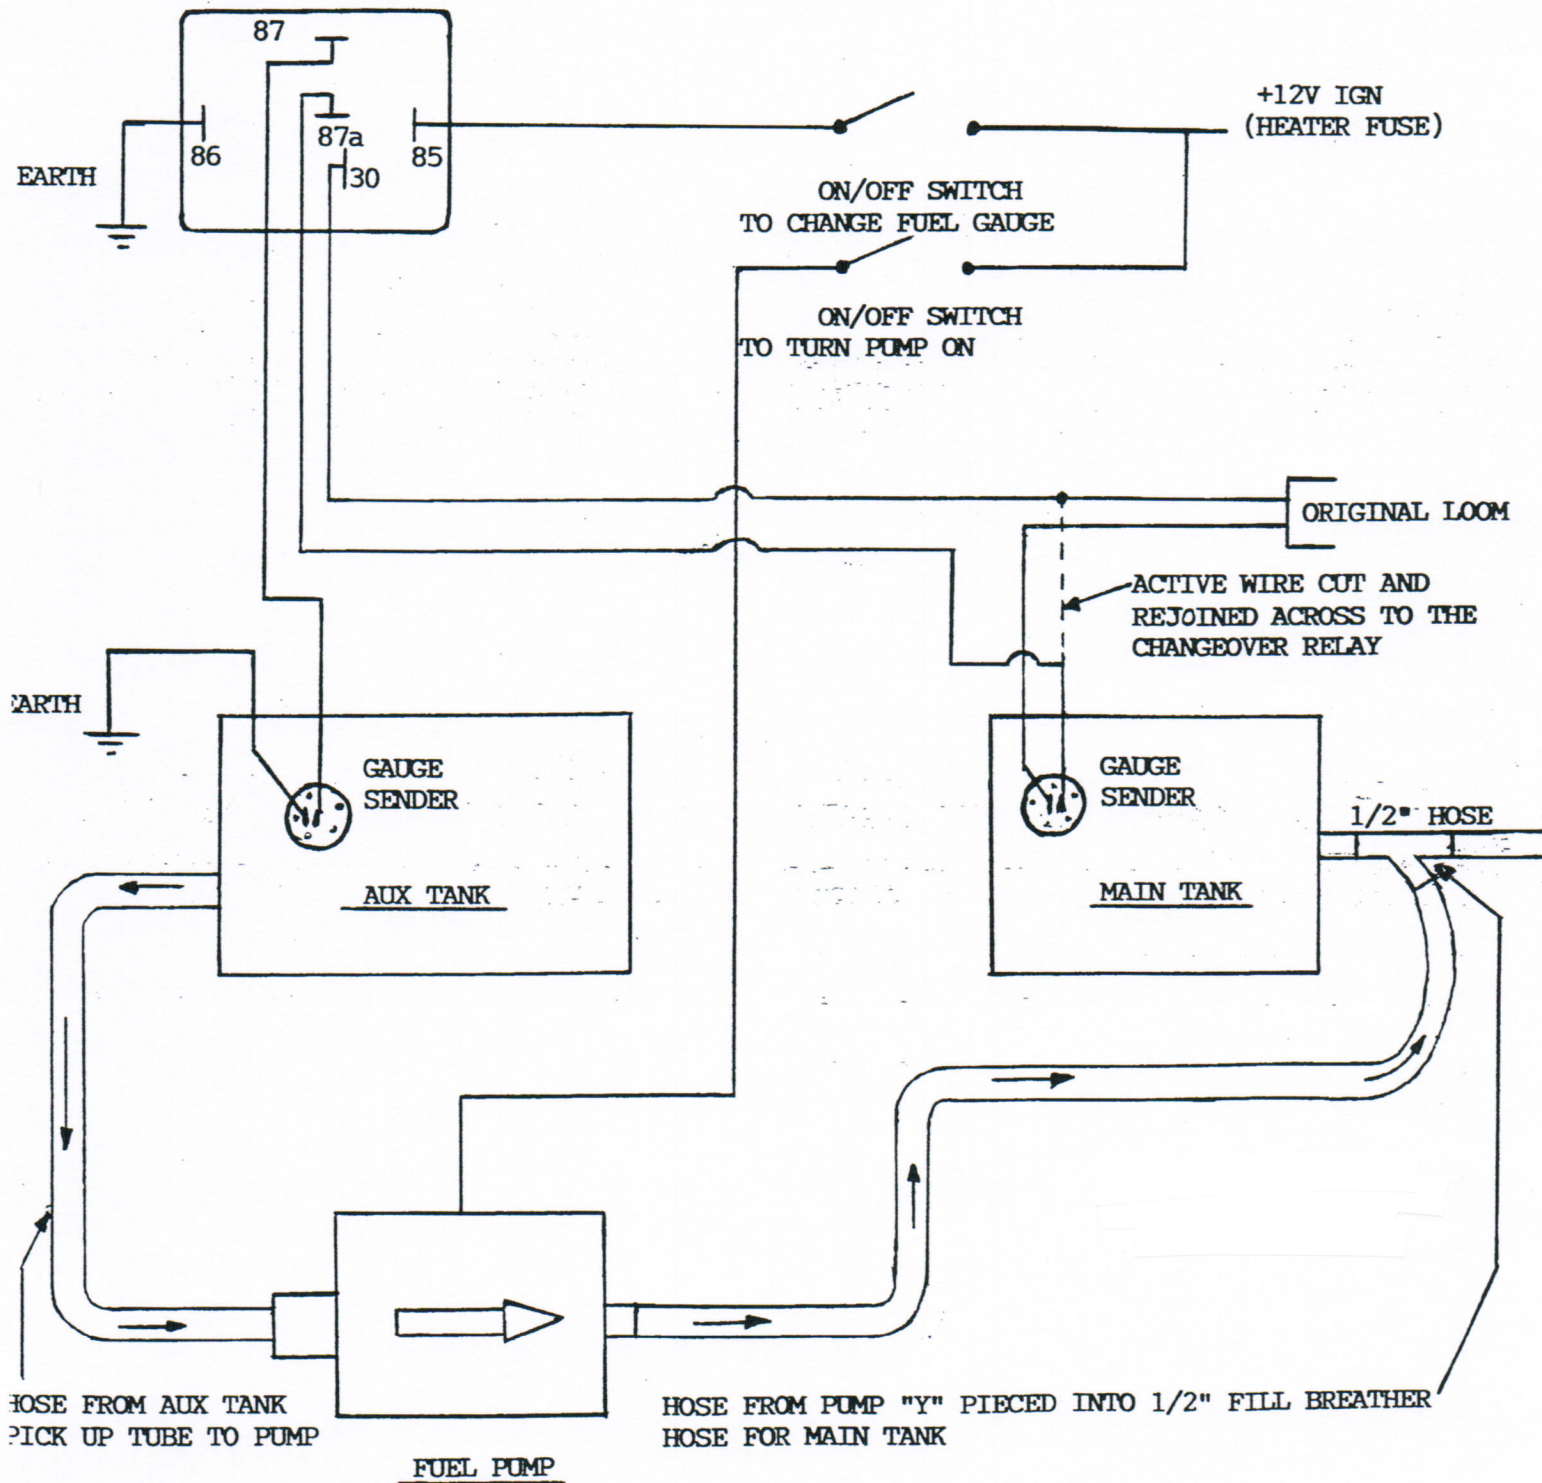

* WHEN THE PUMP IS ON FUEL FLOWS IN DIRECTION OF THE ARROWS FROM THE AUX TANK INTO THE MAIN TANK.