



Brown Davis Automotive Pty. Ltd.

ABN: 72 657 573 544

Copyright Brown Davis Automotive Pty. Ltd. This document contains confidential and Technical information the property of Brown Davis Automotive Pty. Ltd.

UGTP150F1

1

Underguard Part List and Installation Instructions

*Underguard P/N: **UGTP150F1***

TOYOTA PRADO 150 SERIES
RADIATOR, INTERCOOLER, SUMP, STEERING & DIFF

Item	Description	Quantity	Part number	P	C
1	UNDERGUARD	1	UGTP150F1		
2	STEEL PLATE - OIL DRAIN COVER	1	UP-ODC		
3	SET SCREW – HEX – M8 x 25mm – PLATED 8.8	4			
4	SET SCREW – HEX – M8 x 60mm – PLATED 8.8	2			
5	SET SCREW – HEX – M8 x 50MM – PLATED 8.8	2			
6	WASHER – PANEL PLATED – M8	8			
7	WASHER – SPRING PLATED – M8	8			
8	SET SCREW – COUNTERSUNK – M5 x 10mm – PLATED 8.8	2			
9	KIT LIST	1			
10	BROWN DAVIS AUTOMOTIVE STICKER	1			

Packed by (P): _____

Checked by (C): _____

Date Packed: ____ / ____ / ____

Last edited: 9/11/12

P:\INSTRUCT\UNDERGUARDS\Word Files\UGTP150F1.doc



Brown Davis Automotive Pty. Ltd.

ABN: 72 657 573 544

Copyright Brown Davis Automotive Pty. Ltd. This document contains confidential and Technical information the property of Brown Davis Automotive Pty. Ltd.

UGTP150F1

2

All Brown Davis Automotive Underguards are manufactured from 3.0 mm cold rolled steel, and electroplate finished to ensure maximum strength and durability and minimum corrosion susceptibility. This gauge of steel is sufficiently impact resistant.

All Underguards are M.I.G. (Metal Inert Gas) welded to assure the strongest possible seams and are strengthened where necessary to add further protection and impact capabilities. Where needed guard bolt holes/bolt heads are protected with strategically placed steel shields.

In all cases, Brown Davis Underguards are designed with severe off road use in mind and are designed to protect against impact and damage sustained due to harsh conditions or coming into contact with terrain.


Installation Instructions

1. Remove the standard guard by removing the 8×M8 bolts



2. Lift Brown Davis Underguard into position using lifting device
3. Fit using supplied bolts M8×25mm at front M8×60mm in middle and M8×50mm fit all finger tight in place before tightening

4. Fit oil drain cover using supplied M5×15mm set screws

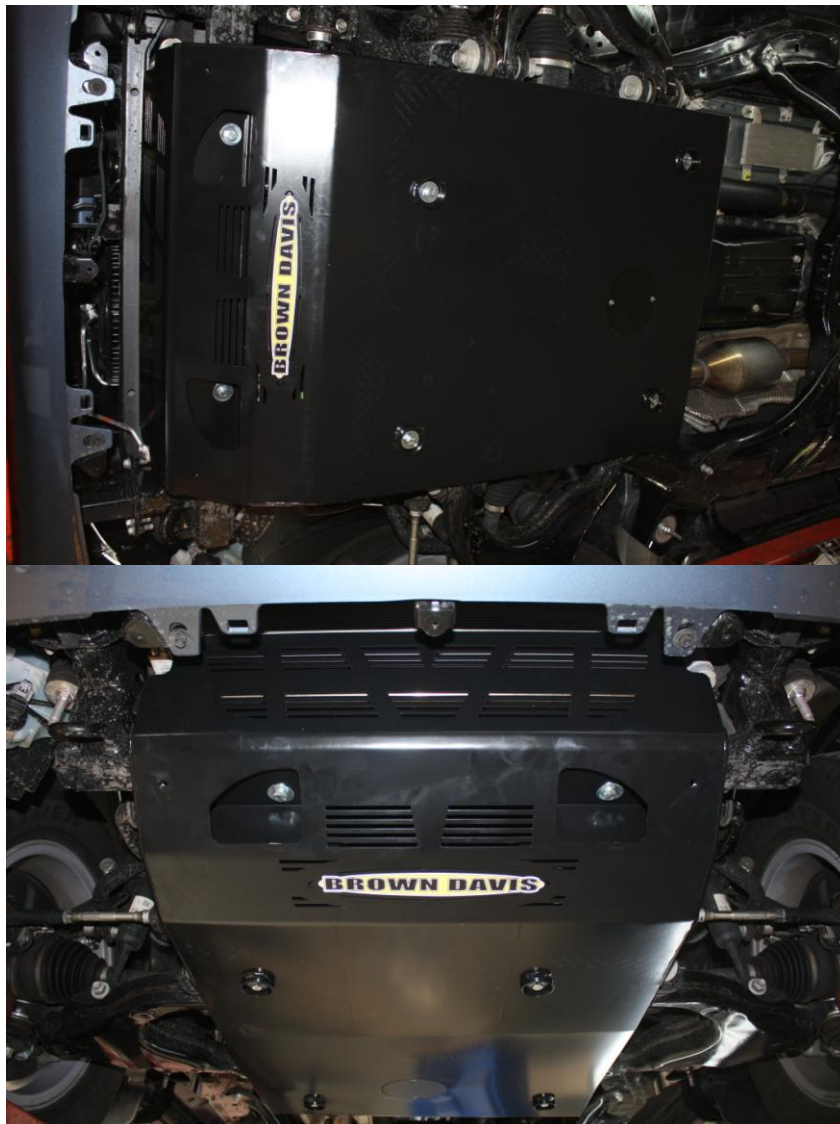

5. Tighten all bolts