



UNDER BODY PROTECTION
UGVW02F1

Brown Davis Automotive Pty. Ltd.
ABN: 72 657 573 544

Copyright Brown Davis Automotive Pty. Ltd. This document contains technical information the property of Brown Davis Automotive Pty. Ltd.


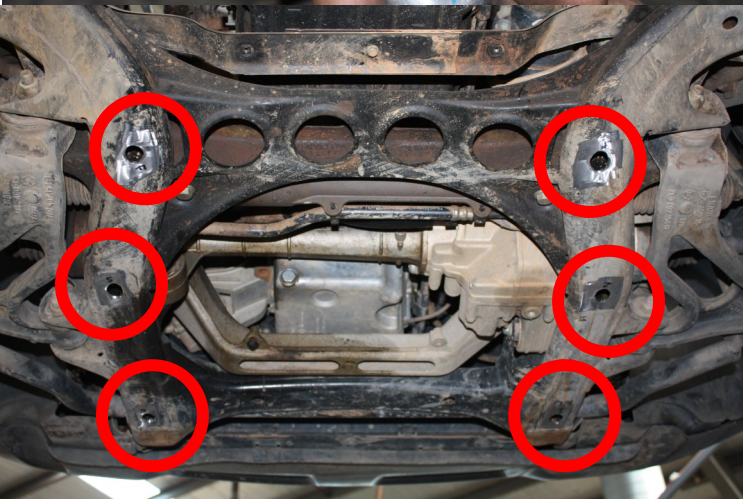

**VOLKSWAGEN TOUAREG 2002-PRESENT - RADIATOR, SUMP AND STEERING
UNDERGAURD PARTS LIST AND FITTING INSTRUCTIONS
PART NUMBER: UGVW02F1**

Item #	Description	Quantity	Part No.	P	C
1	UNDERGUARD	1	UGVW02F1	-	-
2	SET SCREW – HEX – M10X 35mm - PLATED 8.8	8			
3	WASHER – FLAT PLATED – M10	8			
4	WASHER – SPRING PLATED – M10	8			
5	BP-SC-10-020-050	8			
6	KIT LIST	1			

	STAFF MEMBERS INITIALS	DATE
KIT PACKED BY		
KIT CHECKED BY		

Brown Davis Automotive Pty. Ltd.
ABN: 72 657 573 544

Copyright Brown Davis Automotive Pty. Ltd. This document contains technical information the property of Brown Davis Automotive Pty. Ltd.

1. Remove the standard gaurds.	
2. Lift guard in place and confirm/mark holes	
3. To mount the guard, captive threads must be welded in. <ul style="list-style-type: none">• Locate and drill/grind out 6 holes for the front guard.• Insure holes are big enough to fit the nut and weld through.	  

Brown Davis Automotive Pty. Ltd.
ABN: 72 657 573 544

Copyright Brown Davis Automotive Pty. Ltd. This document contains technical information the property of Brown Davis Automotive Pty. Ltd.

4. Tack the captives in place.
 - Lift guard to check the hole centres are correct.
 - Once sure captives are in the correct place, move guard and weld the captives in place.
 - Spray welds with a rust proof paint.



5. Using a lifting device, lift guard in place and with bolts and washers supplied, mount the guard.



6. Tighten all the bolts.