



Brown Davis Automotive Pty. Ltd.

ABN: 72 657 573 544

Copyright Brown Davis Automotive Pty. Ltd. This document contains confidential and Technical information the property of Brown Davis Automotive Pty. Ltd.

RRCA6 & RRCA 7

1

Last edited: 1/09/2010

Fuel Tank Kit List and Installation Instructions

TANK P/N: RRCA6 & RRCA7

**RANGE ROVER (CARBY) & DISCOVERY (DIESEL)
2 x 40ltr AUXILIARY PETROL TANK**

Item	Description	Quantity	Part number	P	C
1	TANK – AUXILIARY	1	RRCA6		
2	TANK – AUXILIARY	1	RRCA7		
3	HOSE – TMP - 6mm	8.0m			
4	HOSE – TMP – 12.5mm	1.2m			
5	HOSE – FUEL AND EMISSION - 8mm	7.0m			
6	HOSE – FILLER - 51mm	0.1m (x2)			
7	HOSE CLAMP – STAINLESS - 8-16mm	26			
8	HOSE CLAMP – STAINLESS - 12-20mm	6			
9	HOSE CLAMP – STAINLESS - 40-60mm	4			
10	FUEL PICK UP - 3/8" x 1/4" BSP ELBOW	2			
11	BRASS – ELBOW – 1/4 x 1/4 BSP	2			
12	BRASS – ELBOW – 5/16 x 1/4 BSP	2			
13	BRASS – TAIL BARB – 1/2 x 1/4 BSP	2			
14	BRASS – PLUG – 1/4" BSP	2			
15	DRAIN PLUG – MAGNETIC – M14 (fitted to tank)	1	DP-M14		
16	T-PIECE – OFFSET – STEEL - 5/8" x 1/4"	1	TPO-5814		
17	WIRE – TWIN CORE – 3.0mm – RED/BLACK	8.5m			
18	CRIMP FITTING – SPADE FEMALE 1/4 - RED	2			
19	CRIMP FITTING – RING 5mm - RED	18			
20	CRIMP FITTING - JOINER 1/4 - RED	14			
21	SCOTCH LOCK	1			
22	SWITCH – TOGGLE DPDT	2			
23	AUX/MAIN LABEL PLATE	1			
24	ON/OFF LABEL PLATE	1			
25	SET SCREW – HEX – M10 x 30mm – ON WIRE – PLATED 8.8	4			
26	SET SCREW – HEX – M10 x 30mm – PLATED 8.8	4			
27	NUT – STANDARD PLATED – M10	16			
28	WASHER – FLAT PLATED – M10	4			
29	WASHER – SHAKEPROFF INTERNAL PLATED – M10	8			
30	SET SCREW – HEX – PLATED - 5/16" x 3/4" UNC	4			

PH: +61 (3) 9762 8722 FAX: +61 (3) 9762 9829
47 Holloway Drive, Bayswater, Victoria, Australia 3153

info@browndavis.com.au www.browndavis.com.au



Brown Davis Automotive Pty. Ltd.

ABN: 72 657 573 544

*Copyright Brown Davis Automotive Pty. Ltd. This document contains confidential and
Technical information the property of Brown Davis Automotive Pty. Ltd.*

RRCA6 & RRCA 7

2

31	WASHER – SHAKEPROOF INTERNAL PLATED - 5/16"	4			
32	SET SCREW – HEX – M6 x 20mm – PLATED 8.8	4			
33	NUT – STANDRAD PLATED – M6	6			
34	WASHER – SPRING PLATED – M6	6			
35	SELF TAPER SCREW – BUTTON HEAD - 13mm – STAINLESS	8			
36	SENDER UNIT – VDO 220-005 (fitted to tank)	2			
37	FUEL FILTER – INLINE – 8mm	2			
38	FUEL CAP & GASKET - NYLON	2			
39	CHANGEOVER VALVE – 6-PORT (42-159c)	2			
40	LOOM – CHANGEOVER VALVE – 6-PORT (42-203)	2			
41	TANK BRACKET – CHANGEOVER VALVE BRACKET	2			
42	FILLER NECK	1	FN-RRCA3		
43	FILLER NECK	1	FN-RRCA4		
44	WARRANTY CARD & INFORMATION SHEET	1			
45	BROWN DAVIS AUTOMOTIVE STICKER	1			

Packed by (P): _____

Checked by (C): _____

Date Packed: ____ / ____ / ____

PH: +61 (3) 9762 8722 FAX: +61 (3) 9762 9829
47 Holloway Drive, Bayswater, Victoria, Australia 3153

info@browndavis.com.au www.browndavis.com.au



Brown Davis Automotive Pty. Ltd.

ABN: 72 657 573 544

*Copyright Brown Davis Automotive Pty. Ltd. This document contains confidential and
Technical information the property of Brown Davis Automotive Pty. Ltd.*

RRCA6 & RRCA 7

3


All Brown Davis Automotive fuel tank kits are manufactured to Australian Standards and the Australian Design Rules where applicable and carry a full **3 Year Warranty**. Construction in 2.0 mm (14 gauge) cold rolled, aluminium coated, steel ensures maximum strength and durability and minimum corrosion susceptibility. This gauge of steel is sufficiently impact resistant that an additional tank guard is not necessary (most standard tank guards are thinner than 1.5 mm).

All tanks are M.I.G. (Metal Inert Gas) welded to assure the strongest possible seams and are baffled to prevent fuel surge. They are then pressure tested using two different techniques to eliminate the possibility of leaks. Drain plugs are fitted horizontally to prevent them being damaged if the tank is scraped over rocks and are magnetic to collect any metallic dirt that may enter your fuel system.

In all cases, Brown Davis Automotive fuel tanks are designed with severe off road use in mind and will not compromise ground clearance, entry, exit or ramp over angles.

AUXILIARY TANKS Are designed to be installed in addition to the original factory fuel tank, with its own fuel gauge. An electrical changeover system simultaneously changes the source of fuel from the original (main) tank to the auxiliary tank (or vice versa), the vehicles fuel gauge is simultaneously changed over to indicate the level in the tank from which the fuel is being drawn.

3 TANK SYSTEM — WIRING & FUEL HOSE DIAGRAM (42-149 VALVES)

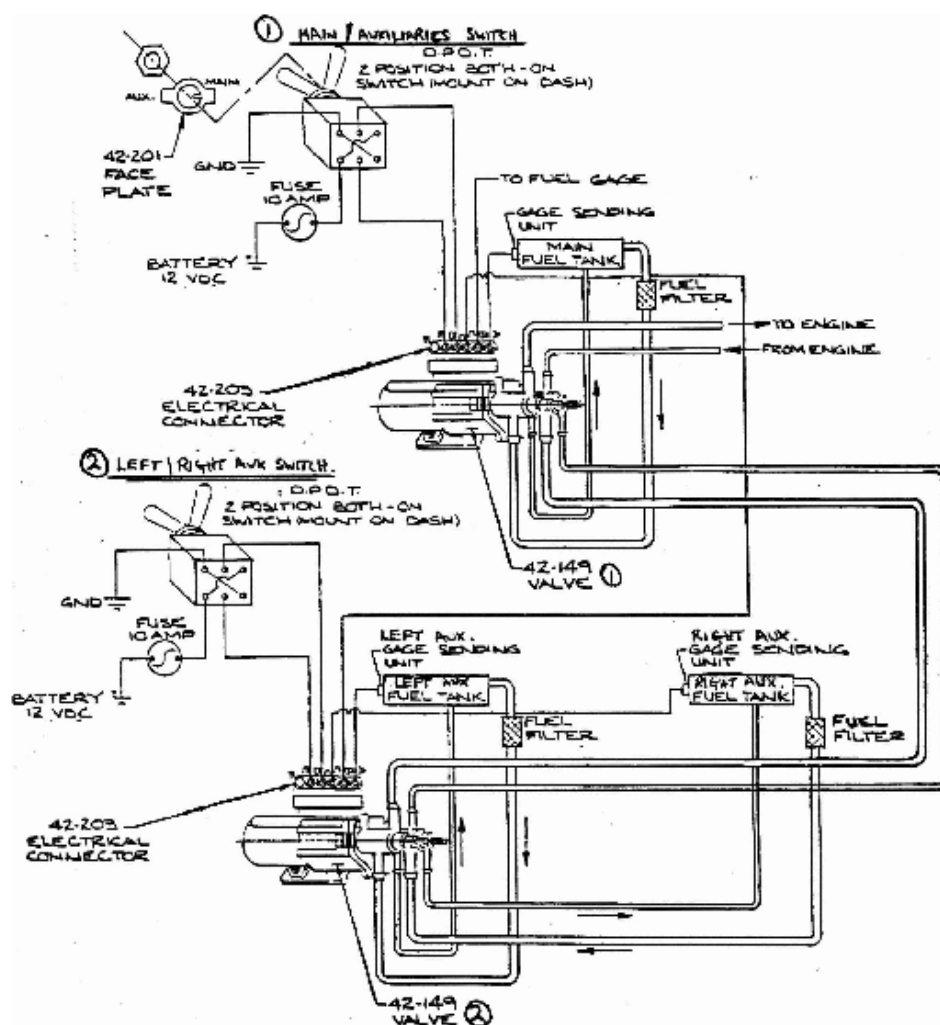



Brown Davis Automotive Pty. Ltd.

ABN: 72 657 573 544

Copyright Brown Davis Automotive Pty. Ltd. This document contains confidential and Technical information the property of Brown Davis Automotive Pty. Ltd.

RRCA6 & RRCA 7

5

OPERATION INFORMATION

The operation of your new Brown Davis Automotive gas conversion fuel tank is little different from the original main tank, however very similar.

Filling the tank may be via a dual filler neck in the factory fuel fill position, or may be a remote filler at another location as identified to you upon installation. Simply fill the auxiliary petrol tank exactly as with a standard tank via the appropriate filler type.

The fuel gauge is separate to the main tank, however will read as with a standard gauge indicating empty/full and the progression in between. It should read with the same degree of accuracy as with a standard tank other than the difference in capacity to the standard tank.

The low fuel light for the main tank will still function as normal.

Maintenance and service of your new Brown Davis Automotive auxiliary fuel tank other than the recommended 1000km check and filter change should be in align with the normal vehicle Manufactures service schedule and guidelines. Remember the long range tank has a magnetic drain plug that the standard tank did not. With the fuel level low the drain plug can be removed and cleaned to remove any metal fragments introduced from the filler bowser scraping on the filler tube when filling or particles and rust flakes from jerry cans used on long trips. This facility is supplied to protect the in-tank fuel pumps fitted to most modern vehicle fuel tanks.

Finally make sure the warranty card is filled out completely and returned to Brown Davis Automotive and that the warranty information is read and understood. If there are any queries about this or any of the above information please contact us at Brown Davis at the attached address or phone and fax numbers for assistance.